

3.7.3. Setting media type.

The procedure for setting media type is explained below.
To set the media type, follow the steps below.

Step 1 : Turn the printer on and load the media.

- Once the media has been loaded, the media initial menu will be displayed.

Step 2 : Press one of the following keys on the control panel, and select the current media type.

- When alternating the roll/sheet media selection: [F2]
- When changing from media loading: [F3]
- When changing media type: [F4]



Setup item	Key name	Parameters	Descriptions
Media Type	F2	Roll media	Alternates the roll media type.
		Sheet media	→ roll media : set when loading roll media. → sheet media : set when loading the sheet media
Lever Up/ Down	F3	Lever up	Switches between up and down motion of the pressure rollers.
		Lever down	Use this when starting over from the media setup.
Media type	F4	User 1	Set media type for printing.
		User 2	For setup values of printing operation, eight settings of "user 1 – 8" can be set.
		User 3	
		User 4	
		User 5	
		User 6	
		User 7	
		User 8	

Step 3 : Press the [ENTER] key on the operation panel.

- The media type is set.
- "Media Initial" is displayed on the LCD and the printer starts the media initial operation.



Notes :

The printer starts the media initial operation when you perform the following at media type setup menu.

- ☐ Pressing the [CANCEL] key on the operation panel.
- ☐ Leaving the printer for 10 seconds without doing anything.

P a p e r I n i t i a l
U s e r 1