



## 4.2.6 CAPPING

### ■ Outline

Adjusts the location for capping. Adjusted value is saved in the system parameter.

Basically, it is not necessary to make adjustment even when cap (and the like) has been replaced.

### ■ Adjustment procedure

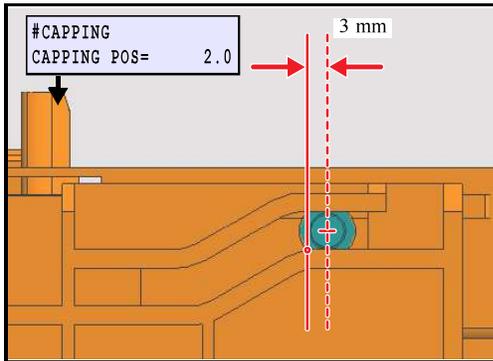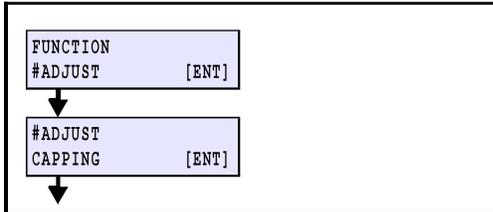

1. Select [#ADJUST] - [CAPPING].



2. Make adjustment so that the cap slider is located at 3 mm to the right from the uppermost point it has reached on the cap base.



Adjust the cap1 as a standard.




- Wiper is at the position where not touch the carriage base.
- P Head connecting hook is at the position where it is engaged.

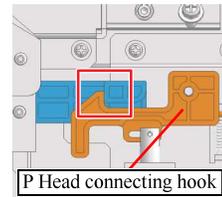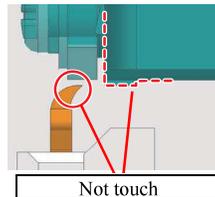

[◀]/[▶]: Horizontally shifts the cap.

[ENTER]: Finalizes (To Next)

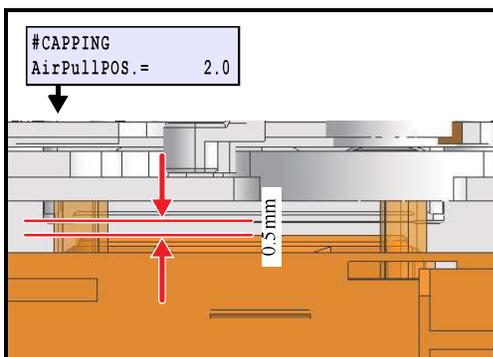

3. Make adjustment so that the clearance between the head and uppermost point of the cap is set at 0.5 mm.

[▲]/[▼]: Shifts the cap.

[ENTER]: Finalizes (To Next)

1

2

3

4

5

6

7

8