


5.7 PARAMETERS

This procedure concerns changing adjustment parameters. Details are as shown below. A special purpose memory card is used to back up backup parameters to the memory card and to update the backup parameters from the memory card.


Item	Details
Initialize	Initialize adjustment parameters
Update	Input adjustment parameter values

Procedures for the selection of items from panel and terminal are shown below.

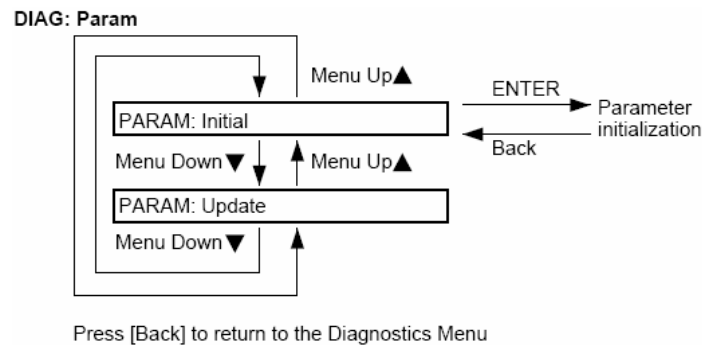

5.7.1 How to Initialize Parameters

This procedure is used to initialize adjustment parameters. Items are: Capping Position, X Resolution, Zone Delay, Head Height, Maintenance History (Black Head, Color Head, Wiper), Serial Number and Complete Initialization.

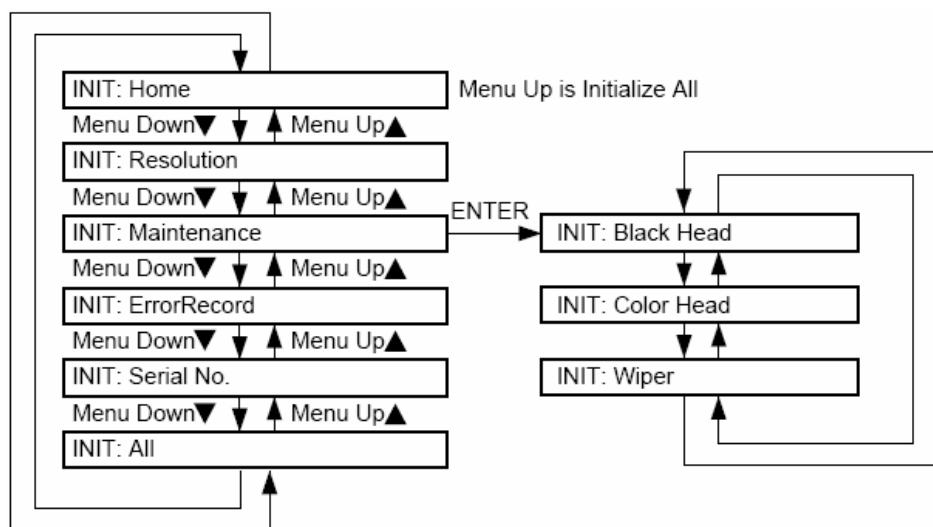

Press [ENTER] to display "Param Initial?". Press [ENTER] again to initialize. After initialization, "INIT: Parameter" is restored. Press the [BACK] key to restore "Param: Initial" without initializing.