

- 13** Remove the HEAD from the ADAPTER and fix the new HEAD to the ADAPTER.



Make sure to fix the HEAD by pressing it to the bottom left corner of the ADAPTER.
Use the 2kgf·cm torque driver (ST-056) to tighten up the screws.

