


Contents

- ▶ Introduction to Your Printer
- ▶ Media Handling
- ▶ **Using the Control Panel Menus**
- ▶ Maintenance
- ▶ Moving or Transporting the Product
- ▶ Solving Problems
- ▶ Technical Specifications
- ▶ Notices

Setting	Options	Description
Btw Pages Nozzle Check	Off	Turns off automatic nozzle checks.
	Print Pattern	Selects how often (based on the number of pages selected) to print a nozzle check pattern. You can then visually check the printed pattern to determine if the print head needs cleaning.
	Auto Nozzle Check	Automatically runs a nozzle check and cleans the print head if necessary based on the number of pages you selected.  <b>Note:</b> Auto Nozzle Check is unavailable if your printout contains White or Metallic Silver ink (SC-S80600 only), the media you loaded is transparent, you selected 2.5 for the <b>Platen Gap</b> setting in the Setup menu, or your printer is exposed to direct sunlight or other ambient light sources.
Lamp Setting	Auto	Selects whether to turn on the light inside the front cover automatically or by using the  light button.
	Manual	
Head Mode (SC-S60600/SC-S80600 only)	2 Heads Mode	Selects the print head to use. If you select <b>2 Heads Mode</b> , you can continue printing if one of the print heads becomes clogged.
	Head1	
	Head2	
Sleep Mode	15 to 240 minutes	Selects the interval before the printer, heaters, and print drying system (if installed) enters sleep mode. The default is 15 minutes.
Restore Settings	Yes	Returns all items in the Printer Setup menu to their default settings.
	No	

Parent topic: [Using the Control Panel Menus](#)